


Main Heat Temperature Location Set

This document intends to guide you in positioning the main heat temperature sensor on the default location, to achieve the most accurate heat curing on the films according to specifications.

Please follow the instructions below

Please locate the main heat temperature sensor by opening the LCD screen side doors, it is located on one of the bottom lamp trays, see the black wire red circled in the picture below.

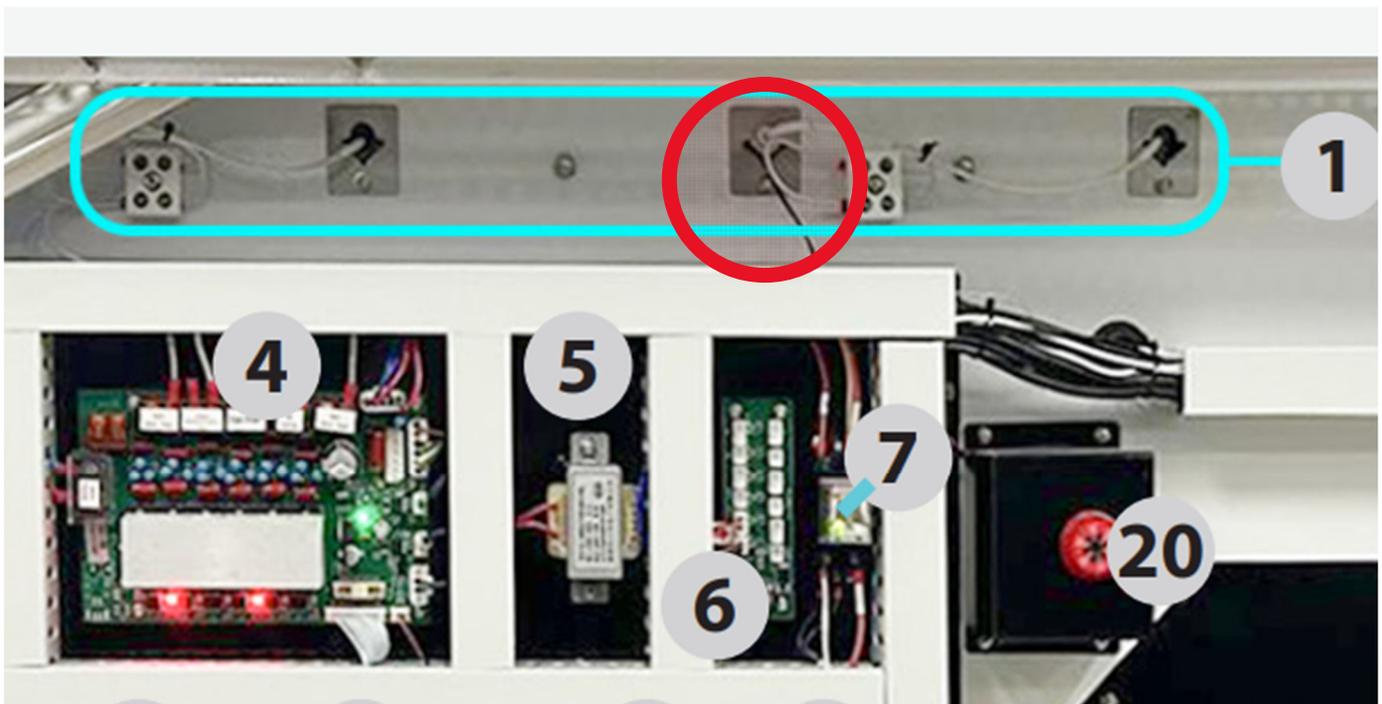

With the shaker OFF pull out the lamp metal tray and release the sensor from the current position, clean the tray from any existing tape, and position the sensor as in the photo below, making sure the end of the sensor is **3 inches** from the edge of the metal tray.

Leave the sensor away from touching the metal tray and thermal tape between the sensor and the metal tray to avoid any direct contact with the sensor.

Then put everything back in place.

Please follow the photos below as a reference.



